

HYUNDAI

POWER EQUIPMENT

HYUNDAI ENGINE

Standby Power 72KVA

111 | B B B T T T F F S S Q Q Q I N I

DHY75KE

DHY75KSE

Diesel Generator



All Days | Safty | Reliable | Stability



CONTROL PANEL

\$ P O U S P M \$ N F S IntelLite 9

4VQQPSU FOHJOF BOE BM
 NPOJUPSJOHKNFBTVSFNF
 QSPUFDUJPO 5IJT JT MPO
 CBDL VQ VOJU UP JOUFH\$
 XBZ UP DPOUSPMÌ TVQQP
 TUBOEBSSEKNPEFNK34 È
 34 È64# BOE JOUFSOFU

\$ P O U S P M Q B O F M

• ————— \$ P N B IntelLite 9
 • ————— " 5 4 D P O O F D U P S
 • ————— Q J O
) F B W Z E V U Z D P O O F D U P S


Q I B T F T P D L F U

À T U B O E B S E


Ä P Q U J P O

Measurement	displayment	IntelLite 9
Genset prime power Kw		Å
Power factor		Å
Engine speed		Å
Phase to neutral voltage		Å
Phase to phase voltage		Å
Genset frequency		Å
Genset current		Å
Mains Phase to neutral voltage		Å
Mains Phase to phase voltage		Å
Mains frequency		Å
Engine oil pressure		Å
Engine water temperature		Å
UPS		Å
Battery Voltage		Å
Genset power KVA		Å
Genset running time		Å
Genset Output KWh		Å
History file		Å
Alarm shutdown function		
Low oil pressure warning,shutdown		Å
High water temperature warning,shutdown		Å
Engine over and under speed shutdown		Å
Low fuel level warning,shutdown		Å
Battery low and high voltage warning		Å
Battery charging failure		Å
Genset low and high voltage warning, shut down		Å
Alternator 3 phase voltage unbalance shut down		Å
Alternator low and high frequency warning,shutdown		Å
Genset over load shutdown		Å
Alternator 3 phase current unbalance shutdown		Å
Mains low and high voltage warning		Å
Mains low and high frequency warning		Å
Optional		
Remote start and stop		Å
RS232 card		Å
USB card		Å
RS485 card		Å
Multi language display		Å
GPRS communication		Å
GPS communication		Å

ACCESSORIES

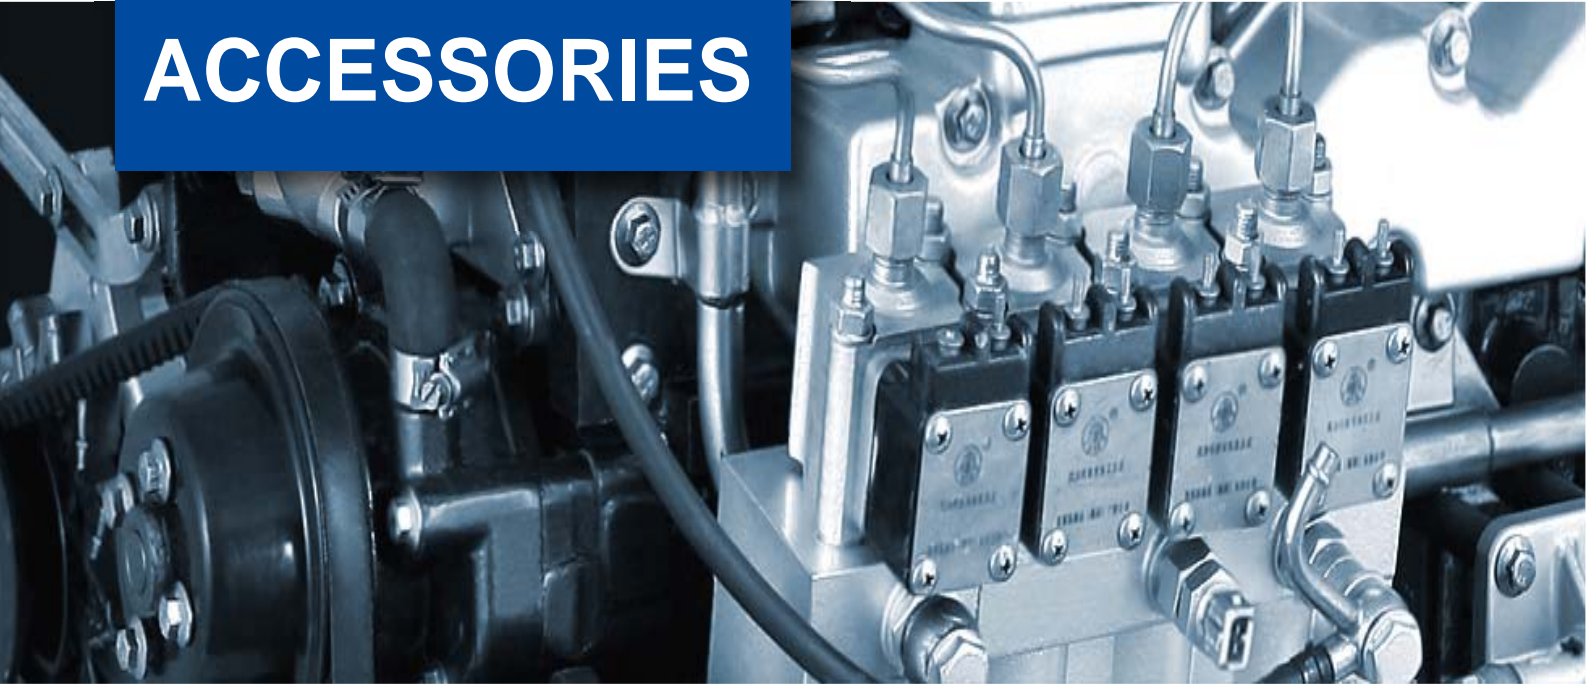

Exhaust system

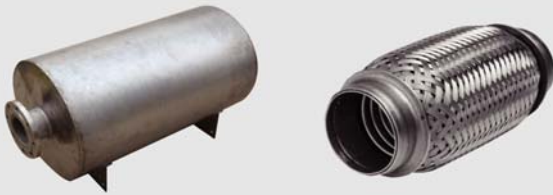

Residential muffler

Exhaust gas pipe

preheating system



Water preheater

Oil preheater

alternator Anti-condensation heater

Fuel system



Auto filling fuel pump

Manual filling fuel pump

500L base frame fuel tank

1000L base frame fuel tank

500L External fuel tank

1000L External fuel tank

electrical system



AMF20 controller

IC-NT
synchronizing
controller

wireless remote starter

Maintenance spare parts



500 hours genset spare parts

1000 hours genset spare parts